

Pipe flashing detail (pre-fabricated pipe boot)



Pipe flashing detail (pre-fabricated pipe boot)

As with any detail, make sure the area is clean and dry. Measure the diameter of the pipe...




...and cut out the same diameter on the pipe boot flange...



Stretch the boot over the pipe and offer into position onto the deck.




With the crayon, mark out the area to be primed approx. 20mm beyond the flange base.

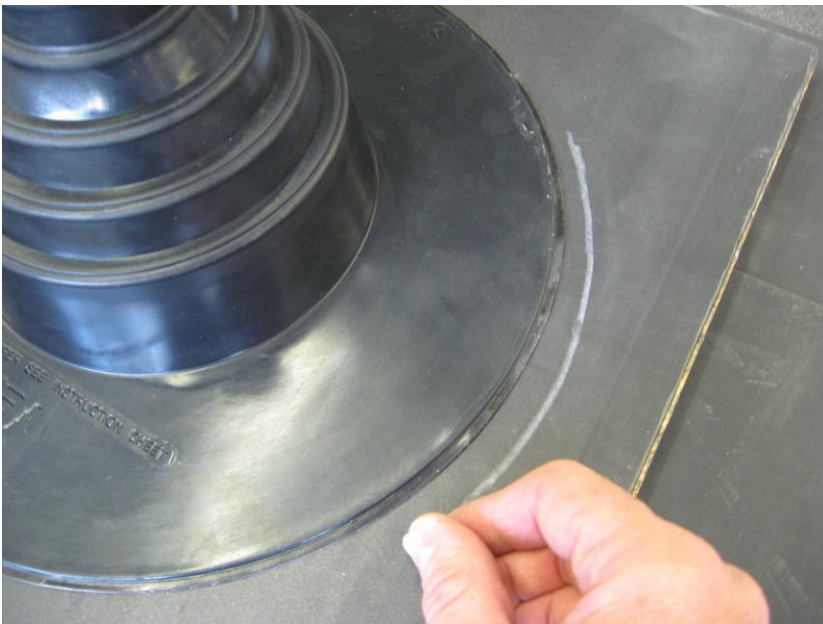

Lift the boot upwards to apply the Quickprime plus onto the deck.




Once the Quickprime Plus becomes tacky, place the boot back into position on the deck and peel away the complete backing paper from underneath.

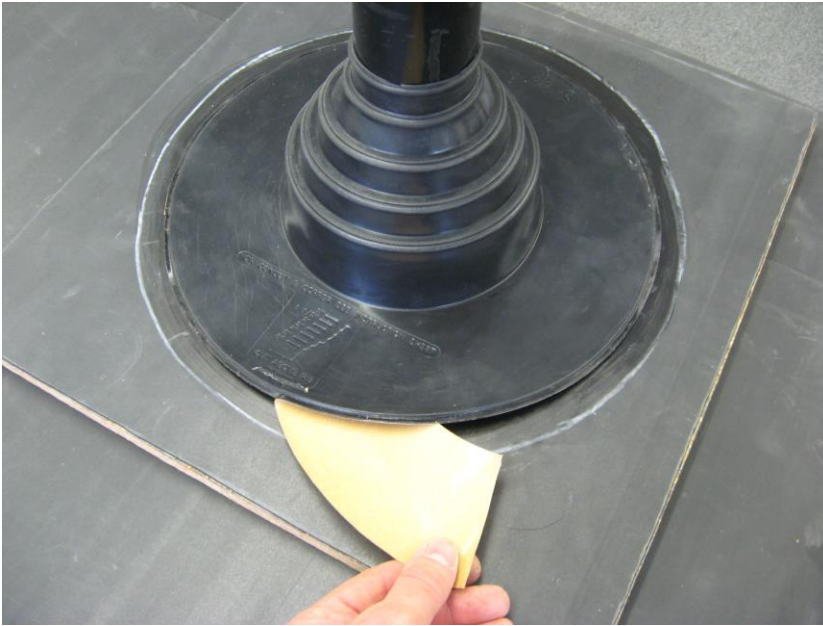

Use the silicon roller to secure the boot to the deck.



Pull the top of the boot around the neck of the pipe to allow Permaseal Bond and Seal to be applied.

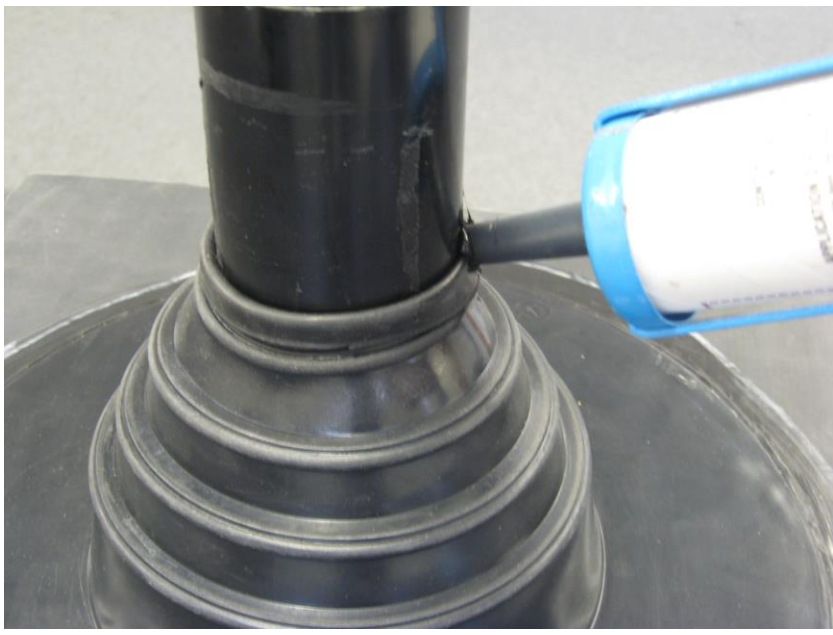

Then close up the top of the boot to cover the sealant...



Now apply the clamping ring, and secure into place.



Remove the excess of the clamp...



The finished detail.

